DENON®

Quick Setup Guide

CEOL

Network CD Receiver RCD-N10

Start Here
Starten Sie hier
Commencez ici
Iniziare qui
Iniciar aquí
Begin hier
Starta här
Начните здесь
Zacznij tutaj

Before you begin

What's In The Box







Remote and batteries



FM antenna



AM antenna

Required For Setup



Network router



Speakers



Speaker cables

• For more information, visit www.denon.com

 Refer to the Online Manual for other functions information and operation procedure details. manuals.denon.com/RCDN10/EU/EN/



Optional



iOS device



 
Router with WPS



Network cable



Mobile phone with Bluetooth

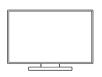


TV with optical output



Optical cable

1. Connection

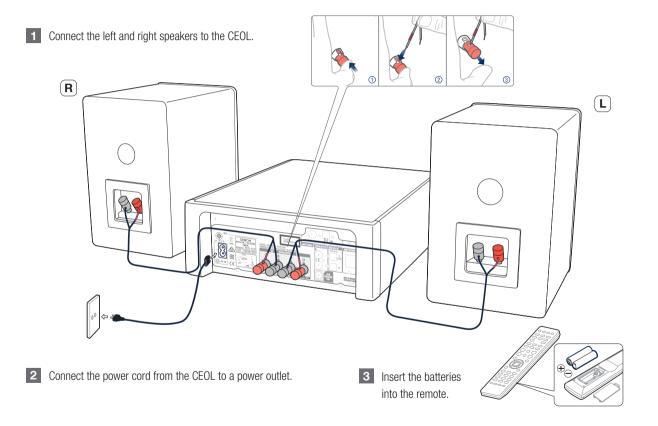

2. Connecting to your home network

Choose from one of the following options.



Wired

1 Connect a network cable between your CEOL and your router. (cable not included)



- 2 Power on.
- 3 Select language.
- 4 Please wait while your CEOL connects to your wired network.

Connected!

Follow the instructions and tap Next.



5 Please wait as completing the connection can take a few minutes.

(The front panel of the CEOL will show the status of the connection.)



Select your network name. (If your network name is not listed. select "Rescan".)





5 Enter your network password using the number keys on the remote control.





Wi-Fi Connected!

4 Press the WPS button on your router. Within 2 minutes, press the ENTER button.







Please wait as completing the connection can take a few minutes. (The front panel of the CEOL will show the status of the connection.)



Press the ENTER button.



If the signal strength of your wireless network is weak, to improve reception, please turn the antenna on the back of your CEOL or move your router to the CEOL.

Network Control Setting



Select Network Control ON to control CEOL from your smartphone, use Bluetooth/Apple AirPlay®/HEOS App and maintain constant network access. Power Consumption during standby power will be slightly higher.



Select Network Control OFF to reduce power consumption during standby. You can not turn on your CEOL from your smartphone or use Bluetooth/Apple AirPlay/HEOS App until your CEOL is powerd on manually and connects to your network.

Auto-Update Setting

1 Turns on Auto-Update so that future updates are automatically downloaded and installed when your CEOL is in standby mode.



Select "On" to turn on Auto-Update.



Select "Off" to turn off Auto-Update.

2 Sets the time zone that matches the area where you live.



Usage Data Setting

To help us improve our products and customer service, Denon collects anonymous information about how you use your CEOL. Denon will never provide any information we collect to third parties.



Select "Yes" to provide information on the operating status of this unit.



Select "No" to not provide information on the operating status of this unit.

Setup Complete!

3. Enjoying your music!

Enjoying Internet radio

1 Press the "INTERNET RADIO" button on the remote.



2 Select a station, then press ENTER button.





3 Select "Play Now", then press ENTER button.





Enjoying music using Apple AirPlay

Tap the AirPlay icon from within any app that supports AirPlay.



2 Select the "Denon CEOL" from the AirPlay Device list.



 
Note: Make sure your iOS device is on the same network as the CEOL.

The screen may differ depending on the OS and software versions.

Enjoying music using Bluetooth

1 Select Bluetooth input by the remote or € key.

When using for the first time, the CEOL will go into the pairing mode automatically and "Bluetooth Pairing Mode" will appear on the display of the CEOL.

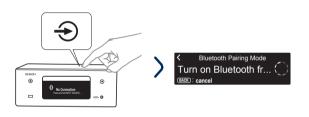

2 Activate Bluetooth on your mobile device.



To reconnect a previously paired Bluetooth device, start at step 2.

3 Select "Denon CEOL" from the Bluetooth device list on your mobile device.




4 Play music using any app on your device.



To pair with other Bluetooth devices, press and hold the "Bluetooth" button on the remote until "Bluettoth Pairing Mode" is displayed on the CEOL.

Enjoying sound from your TV

Connect the optical cable from your TV to the "OPTICAL IN 1" connector of the CEOL.

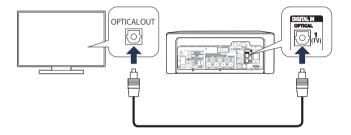

Turn on your TV.

Automatically the CEOL turns on and switches the input to the "Optical In 1".

Note: To disable "Auto-Play", go to Setup and set "Auto-Play" to "Off".

Download the HEOS App





The HEOS App lets you control your CEOL from anywhere in your home. Use HEOS to explore, browse, and play music from many online streaming services or from your own music library.





amazon appstore

Basic trouble shooting

No sound:

- Check all connections.
- Make sure the bare metal wire ends of the speaker wires are in contact with the metal part of the speaker terminals.

- Check the digital audio output setting on your TV.
- Only 2-channel linear PCM can be input as the digital audio signal to the OPTICAL IN connector of the CEOL.



DENON®

www.denon.com