

# ONKYO

Living Speaker System

# LS3200

Sound System Controller (LAP-302)

Front Speakers (SLM-302)

Wireless Subwoofer (SKW-B50)

## Instruction Manual

Thank you for purchasing an Onkyo product. Please read this manual thoroughly before making connections and plugging in your new Onkyo product.

Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new product.

Please retain this manual for future reference.

## Contents

**Before Use .....2**

**Connections .....14**

**Operations .....17**

**Useful Function.....21**

**Appendix.....22**

## WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

## CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**AVIS**  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Damage Requiring Service  
Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power-supply cord or plug is damaged,
  - B. If liquid has been spilled, or objects have fallen into the apparatus,
  - C. If the apparatus has been exposed to rain or water,
  - D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
  - E. If the apparatus has been dropped or damaged in any way, and
  - F. When the apparatus exhibits a distinct change in performance this indicates a need for service.

PORTABLE CART WARNING



S3125A

## 16. Object and Liquid Entry

Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus. Don't put candles or other burning objects on top of this unit.

## 17. Batteries

Always consider the environmental issues and follow local regulations when disposing of batteries.

## 18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.

Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.

# Precautions

1. **Recording Copyright**—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder.

2. **AC Fuse**—The AC fuse inside the unit is not user-serviceable. If you cannot turn on the unit, contact your Onkyo dealer.

3. **Care**—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

## 4. Power

### WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

For models with [POWER] button, or with both [POWER] and [ON/STANDBY] buttons:

Pressing the [POWER] button to select OFF mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

For models with [ON/STANDBY] button only:

Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

### Nameplate Location

The nameplate is located on the bottom exterior.

## 5. Preventing Hearing Loss

### Caution

Excessive sound pressure from earphones and headphones can cause hearing loss.

## 6. Batteries and Heat Exposure

### Warning

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like.

7. **Never Touch this Unit with Wet Hands—**  
Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer.
8. **Handling Notes**
  - If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it.
  - Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.
  - This unit's top and rear panels may get warm after prolonged use. This is normal.
  - If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally.

## For U.S. models

### FCC/IC Information for User

#### IMPORTANT NOTE:

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules.

This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

#### REMARQUE IMPORTANTE :

Cet équipement est conforme aux limites FCC/IC d'exposition aux rayonnements définies pour un environnement non réglementé, aux lignes directrices de la FCC en matière d'exposition aux radiofréquences (RF) spécifiées dans le supplément C du bulletin OET65 et aux réglementations RSS-102 de l'IC sur l'exposition aux radiofréquences (RF). Cet équipement étant associé à de très faibles niveaux d'énergie radiofréquence, il est considéré conforme sans évaluation de l'exposition maximale admise (EMA). Il est cependant conseillé de l'installer et de l'utiliser en maintenant la source de rayonnement radioélectrique à 20 cm minimum du corps (à l'exclusion des extrémités du corps : les mains, les poignets, les pieds et les chevilles).

## FCC Caution:

### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être placé à de ou utilisé conjointement avec une autre antenne ou un autre émetteur.

## For Canadian Models

#### NOTE:

CAN ICES-3 B/NMB-3 B.

For models having a power cord with a polarized plug:

#### CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Modèle pour les Canadien

### REMARQUE:

CAN ICES-3 B/NMB-3 B.

Sur les modèles dont la fiche est polarisée:

### ATTENTION:

POUR ÉVITER LES CHOCS ÉLECTRIQUES,  
INTRODUIRE LA LAME LA PLUS LARGE DE  
LA FICHE DANS LA BORNE  
CORRESPONDANTE DE LA PRISE ET  
POUSSER JUSQU'AU FOND.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## For British models

Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

## IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

## IMPORTANT

The plug is fitted with an appropriate fuse. If the fuse needs to be replaced, the replacement fuse must be approved by ASTA or BSI to BS1362 and have the same ampere rating as that indicated on the plug. Check for the ASTA mark or the BSI mark on the body of the fuse.

If the power cord's plug is not suitable for your socket outlets, cut it off and fit a suitable plug. Fit a suitable fuse in the plug.

## For European Models



Hereby, Onkyo Corporation, declares that this LAP-302 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

С настоящето, Onkyo Corporation, декларира, че LAP-302 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.

Onkyo Corporation tímto prohlašuje, že LAP-302 splňuje základní požadavky a všechna příslušná ustanovení Směrnice 1999/5/ES.

Undertegnede Onkyo Corporation erklærer herved, at følgende udstyr LAP-302 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erkläre Onkyo Corporation, dass sich das Gerät LAP-302 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

Käesolevaga kinnitab Onkyo Corporation seadme LAP-302 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ο ΚΑΤΑΣΚΕΥΑΣΤΗΣ Onkyo Corporation ΔΗΛΩΝΕΙ ΟΤΙ LAP-302 ΣΥΜΜΟΡΦΟΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ

Por la presente, Onkyo Corporation, declara que este LAP-302 cumple con los requisitos esenciales y otras exigencias relevantes de la Directiva 1999/5/EC.

Par la présente, Onkyo Corporation déclare que l'appareil LAP-302 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Con la presente Onkyo Corporation dichiara che questo LAP-302 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Ar šo Onkyo Corporation deklarē, ka LAP-302 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Šiuo Onkyo Corporation deklaruoja, kad šis LAP-302 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

A Onkyo Corporation ezzeneil kijelenti, hogy a LAP-302 típusú beren-dezēs teljesíti az alapvető követelményeket és más 1999/5/EK irányelvben meghatározott vonatkozó rendelkezéseket.

Hierbij verklaart Onkyo Corporation dat het toestel I LAP-302 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Niniejszym Onkyo Corporation deklaruje że LAP-302 jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami Dyrektywy 1999/5/EC.

Eu, Onkyo Corporation, declaro que o LAP-302 cumpre os requisitos essenciais e outras provisões relevantes da Directiva 1999/5/EC.

Prin prezenta, Onkyo Corporation, declară că aparatul LAP-302 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.

Onkyo Corporation tímto vyhlasuje, že LAP-302 a splňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Onkyo Corporation izjavlja, da je ta LAP-302 v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 1999/5/ES.

Onkyo Corporation vakuuttaa täten että LAP-302 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Härmed förklarar Onkyo Corporation att denna LAP-302 följer de väsentliga kraven och andra relevanta stadgar i Direktiv 1999/5/EC.

Hér með lýsir Onkyo Corporation því yfir að varan LAP-302 er í samræmi við grunnkröfur og aðrar kröfur sem gerðar eru í tilskipun 1999/5/EC.

Onkyo Corporation erklærer herved at denne LAP-302 er i overensstemmelse med væsentlige krav og andre relevante bestemmelser i direktiv 1999/5/EC.

## WEEE

<http://www.onkyo.com/manual/weee/weee.pdf>

# Speaker Precautions

## Placement

- The subwoofer cabinet is made out of wood and is therefore sensitive to extreme temperatures and humidity, do not put it in locations subject to direct sunlight or in humid places, such as near an air conditioner, humidifier, bathroom, or kitchen.
- Do not put water or other liquids close to the speakers. If liquid is spilled over the speakers, the drive units may be damaged.
- Speakers should only be placed on sturdy, flat surfaces that are free from vibration. Putting them on uneven or unstable surfaces, where they may fall and cause damage, will affect the sound quality.
- Subwoofer is designed to be used in the upright vertical position only. Do not use it in the horizontal or tilted position.
- If the unit is used near a turntable, CD player or DVD player, howling or slipping of sound may occur. To prevent this, move the unit away from the turntable, CD player or DVD player, otherwise lower the unit's output level.

## Use with a TV set

In general, Braun tubes used for color television sets, etc. are extremely sensitive and can be affected even by the magnetism of the earth. If a speaker system is used near them, therefore, discoloring or distortion of pictures will occur.

**These speakers are not provided with magnetic shielding.** If discoloration or distortion occurs, move the speakers apart from the television set.

## Input Signal Warning

The speakers can handle the specified input power when used for normal music reproduction. If any of the following signals are fed to them, even if the input power is within the specified rating, excessive current may flow in the speaker coils, causing burning or wire breakage:

1. Interstation noise from an untuned FM radio.
2. Sound from fast-forwarding a cassette tape.
3. High-pitched sounds generated by an oscillator, electronic musical instrument, and so on.
4. Amplifier oscillation.
5. Special test tones from audio test CDs and so on.
6. Thumps and clicks caused by connecting or disconnecting audio cables (Always turn off your amplifier before connecting or disconnecting cables).
7. Microphone feedback.

# Package Contents

Make sure you have the following items:

---

**Sound system controller (LAP-302)**

---

**Remote controller (RC-858S)**

---

**AC adapter and Power cord\*1 (→page 16)**

---

**Stereo mini plug cable 5 ft. (1.5 m)**

---

**Optical digital audio cable 5 ft. (1.5 m)**

---

**Front speakers (SLM-302)**

---

**Speaker stand × 2**

---

**Speaker cable 10 ft. (3.0 m) × 2**

---

**12 thin rubber stoppers (For Front speakers and Subwoofer)**

---

**8 thick rubber stoppers**

---

**Wire cable with eye bolt × 2**

---

**Wireless subwoofer (SKW-B50)**

---

**Power cord\*1 (→page 16)**

---

**Quick Guide**

---

\*1 **(Australian models)** The plug type varies from country to country. From the two supplied power cords, choose the one whose plug matches the type of your AC wall outlet.

\* In catalogs and on packaging, the letter at the end of the product name indicates the color. Specifications and operations are the same regardless of color.

## Features

### Sound System Controller

---

- Powerful Digital Amplifier
- 20 W/Ch (4 Ω, 1 kHz, 0.8%, 2 Channels Driven, FTC)
- 20 W/Ch (4 Ω, 1 kHz, 0.8%, 2 Channels Driven, IEC)
- 22 W/Ch (4 Ω, 1 kHz, 2 Channels Driven, JEITA)
- 2 Digital Inputs (Optical/Coaxial)
- 1 Analog Input (Mini Jack)
- Equipped with Dolby Digital
- Normal Mode for Wide Spread Surround
- Voice Mode for Clear Voice (for News Program)
- Bluetooth ver.2.1+EDR (Enhanced Data Rate)
- Auto Standby Function
- Auto Power On Function
- Preset Remote Control Codes for Most TV Brands and Programming Function

### Subwoofer

---

- Wireless Design for Free Setting and Powerful Sound
- Powered Bass Reflex Design
- 6-1/2 inch (16 cm) Cone

### Front Speakers

---

- Detachable Speaker Stands for Greater Mounting Flexibility
- 2-1/2 inch (6.5 cm) Full-range Cone × 2



For DTS patents, see <http://patents.dts.com>.

Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Studio Sound is a trademark of DTS, Inc.

© DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby

Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Onkyo does not guarantee Bluetooth compatibility between the LAP-302 system and all Bluetooth-enabled devices.

For compatibility between the LAP-302 system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Onkyo is under license. Other trademarks and trade names are those of their respective owners.

Please read rating label at the bottom or rear panel of system for other safety information.

---


## ■ Using the Remote Controller





Remove the plastic film before using the remote controller.

To use the remote controller, point it at the controller's remote control sensor, as shown below.

**(Placing on the floor, etc.)**

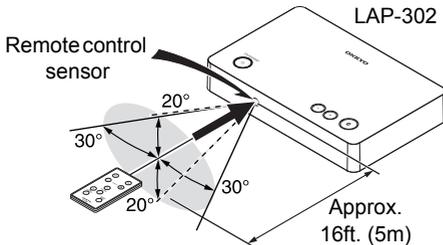


**(Mounting to the wall)**

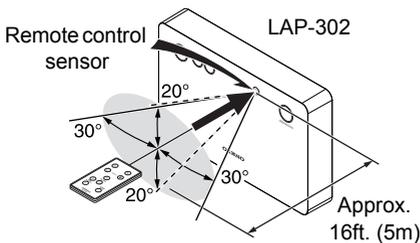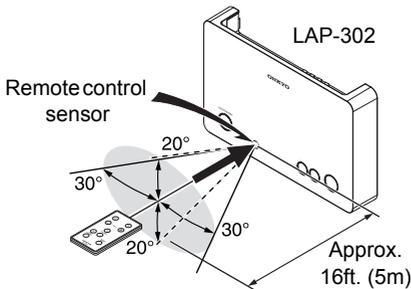

## ■ Replacing the Battery

Use only a battery of the same type (CR2025).

Pull out firmly in the direction of the arrow pressing the tab in the direction of the arrow.

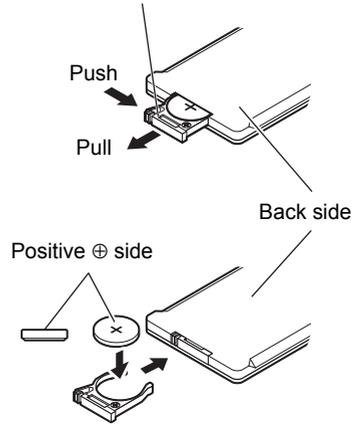

### Note


- If the remote controller doesn't work reliably, try replacing the battery.
- If you intend not to use the remote controller for a long time, remove the battery to prevent damage from leakage or corrosion.
- Remove expired battery as soon as possible to prevent damage from leakage or corrosion.

### Caution

- Replacing the battery incorrectly may cause an explosion. Use only a battery of the same type or an equivalent.

# Getting to Know the LS3200


## Top Panel (LAP-302)

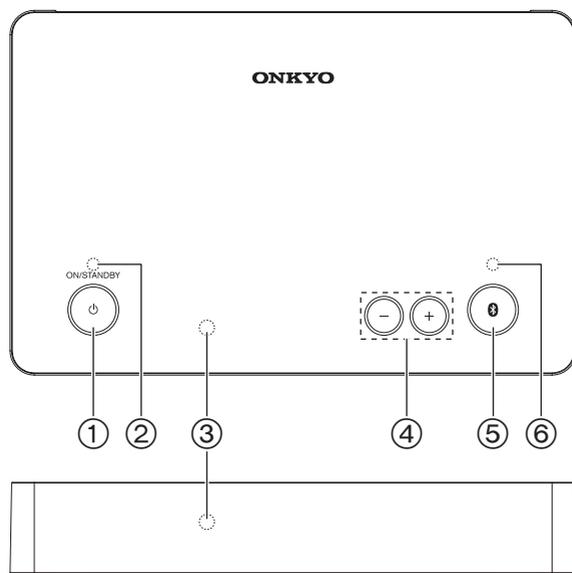

For detailed information, see the pages in parentheses.

- ① **ON/STANDBY button (17)**
- ② **ON/STANDBY LED (17)**
- ③ **Remote control sensor (8)**
- ④ **Volume +/- buttons (17)**
- ⑤ **Bluetooth /TV input button (17)**
- ⑥ **Bluetooth LED (17)**


## Rear Panel (LAP-302)

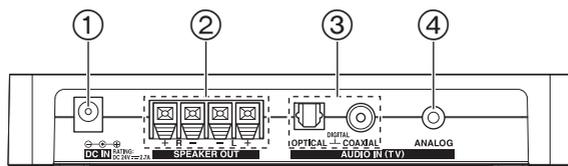

- ① **DC IN jack**
- ② **SPEAKER OUT terminals**
- ③ **AUDIO IN (TV) DIGITAL OPTICAL and COAXIAL jacks**
- ④ **AUDIO IN (TV) ANALOG audio jack**

See “Connections” for connection (→pages 14 to 16).


## Front Speakers (SLM-302)

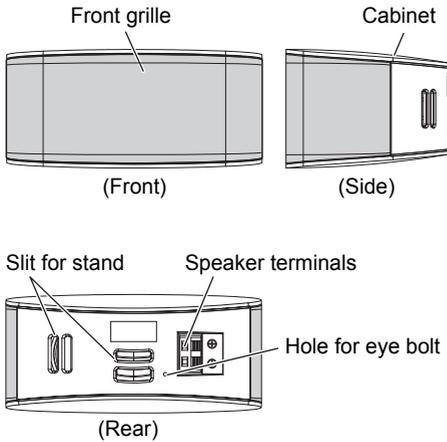

### Caution

- The front grilles are not designed to be removed so do not attempt to remove them forcibly, as this will damage them.


## Subwoofer (SKW-B50)

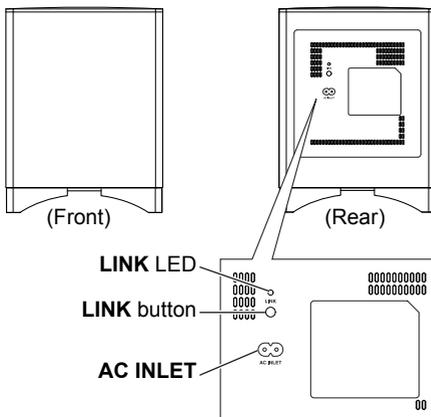

### Note

- The shape of the **AC INLET** differs depending on the country.

## Remote Controller

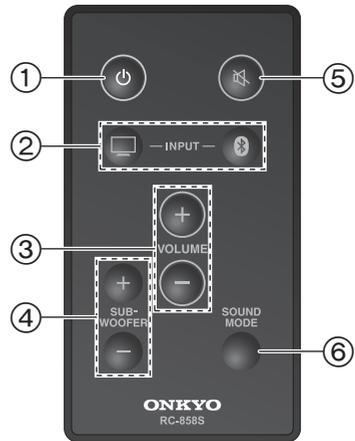

For detailed information, see the pages in parentheses.

- ① **⏻(On/Standby) button (17)**
- ② **📺/📶 INPUT buttons (17)**
- ③ **VOLUME +/- buttons (17)**
- ④ **SUBWOOFER +/- buttons (18)**
- ⑤ **🔇 (Mute) button (18)**
- ⑥ **SOUND MODE button (19)**

## Using your TV remote controller

TV remote control commands of several TV brands are registered in the controller. These commands enable your TV remote controller to operate the Volume +/- and Mute function of the controller.


### Tip

- Some types of TV remote controllers are not compatible with this function. In this case, use the supplied remote controller or perform the programming of the controller. See “Using a TV Remote Controller” for more details (**→page 21**).
- If you operate the controller with your TV remote controller, set the Auto Power On function to on. The controller cannot be turned on by using Power On button on your TV remote controller.

# Placement

This section explains how to mount/place the controller, the front speaker and the subwoofer.

In this instruction manual, Sound System Controller (LAP-302) is described as “controller”.

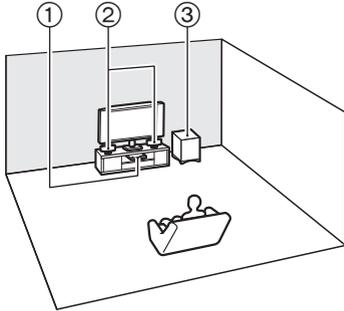

- ① Sound System Controller (LAP-302)
- ② Front speakers (SLM-302)
- ③ Subwoofer (SKW-B50)

## Mounting the Controller

The controller can be placed on a flat surface, and also mounted to the wall by using a commercially available wall-mounting screw.

### ■ Wall mounting


#### 1 Mark the point of the wall by using WALL MOUNTING TEMPLATE (→page 27)

Mark the two points by using a pencil so that the controller can be mounted horizontally.

#### 2 Insert a commercially available wall-mounting screw into the mark and screw it.

#### 3 Insert the head of the screw into the keyhole slot on the bottom of the controller and fix it firmly.

Please confirm that the head of the screw is at the top of the hole.

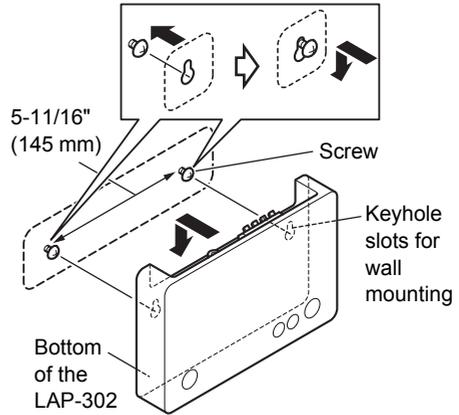


### Tip

- The controller can be mounted upside-down.

### Caution

- For mounting the controller, use a screw with a head diameter of 1/4" (6 mm) or more and 2/32" (7 mm) or less, and a shank diameter of 1/8" (3 mm) or more and 5/32" (4 mm) or less. The screws as thick and long as possible are recommended.
- Leave a gap of between 3/16" (5 mm) and 1/4" (6 mm) between the wall and the base of the screw head, as shown (We recommend that you consult a home installation professional).
- Mount the controller as close as possible to the TV set without hiding the remote control sensor for the TV remote controller.
- Mount the controller in a well-ventilated place.
- When using an appliance which uses 2.4 GHz frequency range such as wireless LAN device, microwave, or digital cordless phone near the LAP-302, the controller may not be operated normally by noise or interruption caused by radio wave interference. To avoid these issues, place the controller away from other appliances.

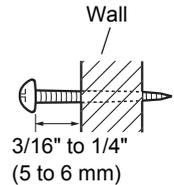


## Mounting/Placing the Front Speakers


### ■ Using the rubber stoppers for a more stable platform

We recommend to use the supplied rubber stoppers to achieve the best possible sound. Attach the rubber stoppers to the four corners of the bottom. The rubber stopper also provides stability.

#### (Placing on the floor, etc.)

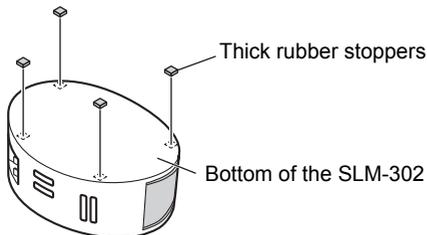

#### (Using the stand)

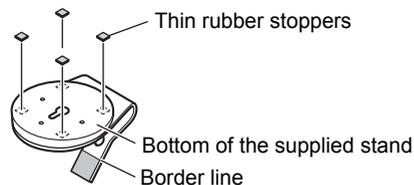


### ■ Attaching the stand


Insert the stand into the stand slit on the rear of the front speaker.

To remove the stand, pull the stand out of the speaker.

#### (Table top)

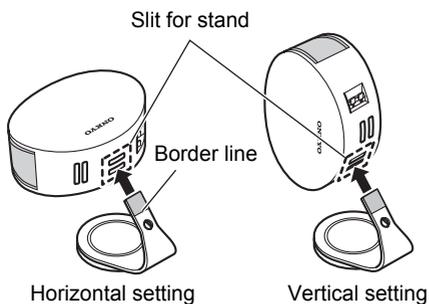


#### (Wall mounting)

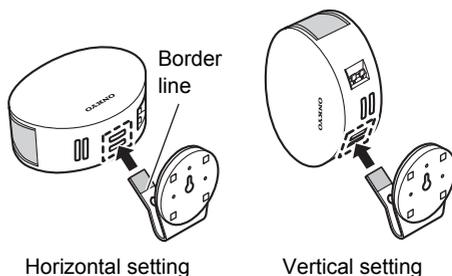

#### Note

- Insert the stand until the border line of the surface cannot be seen and push it all the way in to strike the end.

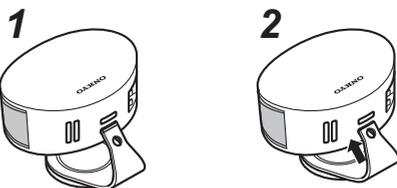


#### Tip

- The front speaker can be mounted/placed both horizontally and vertically.

### ■ Adjusting the angle

The angle of the speaker can be adjusted in two ways depending on which stand slit you use.


#### (Using the upper slit) (Using the lower slit)

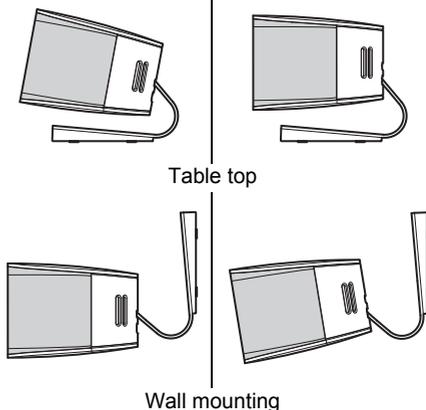

## ■ Wall mounting


- 1 Attach the supplied stand referring to the illustration for wall mounting.**
- 2 Screw a commercially available wall-mounting screw into the wall.**
- 3 Insert the head of the screw into the keyhole slot on the bottom of the supplied stand and fix it firmly.**

Please confirm that the head of the screw is seated at the top of the hole.

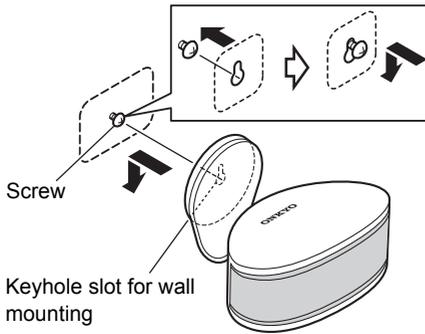


### Note

- Before you wall-mount the front speakers, check the strength of the wall. The supporting strength of the screws depends on the wall material and the position of the studs.
- For mounting the front speaker, use a screw with a head diameter of  $2/32''$  (7 mm) or more and  $5/16''$  (9 mm) or less, and a shank diameter of  $1/8''$  (3 mm) or more and  $5/32''$  (4 mm) or less. The screws as thick and long as possible are recommended.
- Leave a gap of between  $5/32''$  (4 mm) and  $3/16''$  (5 mm) between the wall and the base of the screw head, as shown.
- Mount the front speaker to the vertical wall. Mounting to the inclined wall might cause a falling of the speaker by coming off the stand.
- Do not mount the controller and speaker on a ceiling.

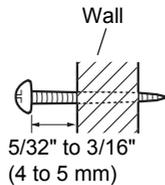

## ■ Fixing the front speakers to prevent a falling accident

When you mount the speaker to the wall, make sure to set it firmly so that it cannot slip and fall. This is especially important if you have small children. Pass the end of the supplied wire through the hole of the stand and tie it. Screw the eye bolt into the eye bolt hole on the back of the cabinet.

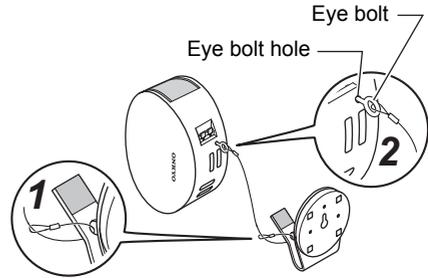


### Note

- A mounting screw's ability to support a speaker depends on the material and the position of studs of the wall (We recommend that you consult a home installation professional).

## Placing the Subwoofer

### ■ Using the rubber stoppers for a more stable platform

We recommend to use the supplied rubber stoppers to achieve the best possible sound. Attach the rubber stoppers to the four corners of the bottom. The rubber stopper also provides stability.

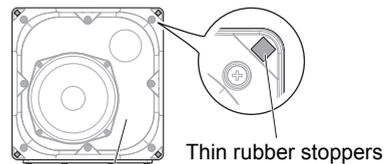


Bottom of the SKW-B50

# Connections

## Connecting the Front Speakers

Connect the supplied front speaker. Connect positive (+) terminal of the front speaker to positive (+) terminal of the controller (LAP-302) and negative (-) terminal of the front speaker to negative (-) terminal of the controller.

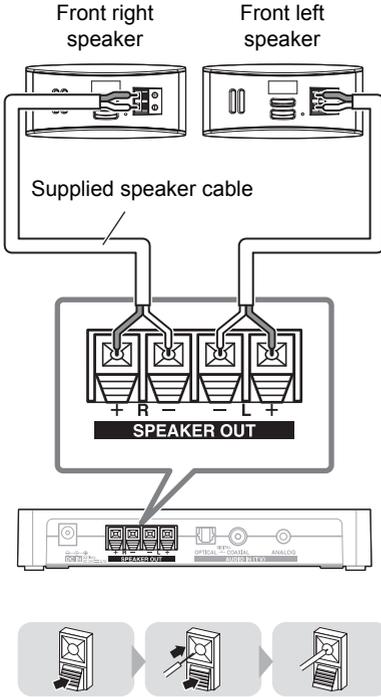


### Tip

- The two speakers are identical, so it doesn't matter which one you use on the left or right.


## Speaker Connection Precautions

Read the following before connecting your speakers:


- You can connect speakers with an impedance of between 4 and 8 ohms.
- Disconnect the power cord from the wall outlet before making any connections.
- Pay close attention to speaker wiring polarity. In other words, connect positive (+) terminals only to positive (+) terminals, and negative (-) terminals only to negative (-) terminals. Incorrect connection may lead to unnatural sound being output due to issues such as reduced bass output due to phase reversal.
- Be careful not to short the positive and negative wires. Doing so may damage the controller.
- Make sure the metal core of the wire does not have contact with the controller's rear panel. Doing so may damage the controller.

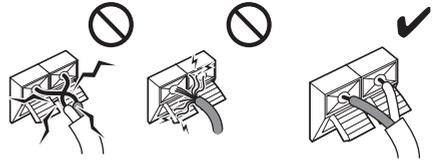

- Don't connect more than one cable to each speaker terminal. Doing so may damage the controller.
- Don't connect one speaker to several terminals.

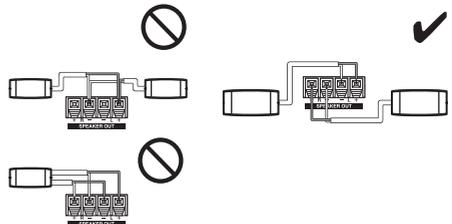

## Using the Subwoofer

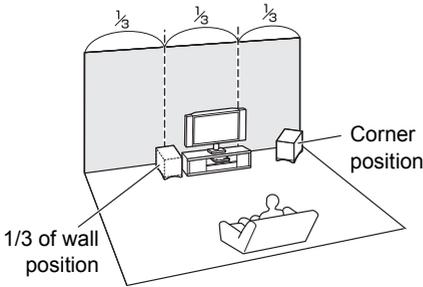

To find the best position for your subwoofer, while playing a movie or some music with good bass, experiment by placing your subwoofer at various positions within the room, and choose the one that provides the most satisfying results.

## About TV Connections

- Before making any TV connections, read the manuals supplied with your TV.
- Don't connect the power cord until you've completed and double-checked the TV connection.
- Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions).
- To prevent interference, keep audio cable away from power cords and speaker cables.

## Cables and Jacks

### Optical digital audio

Optical digital connection allows you to enjoy digital sound such as PCM or Dolby Digital. The audio quality is the same as coaxial.



### Coaxial digital audio

Coaxial digital connection allows you to enjoy digital sound such as PCM or Dolby Digital. The audio quality is the same as optical.



### 1/8" (3.5 mm) Stereo mini plug

This cable carries analog audio.




#### Note

- The controller's optical digital jack has a shutter-type cover that opens when an optical plug is inserted and closes when it's removed. Push the plug in all the way.

#### Caution

- To prevent shutter damage, hold the optical plug straight when inserting and removing.

## Connecting to the TV

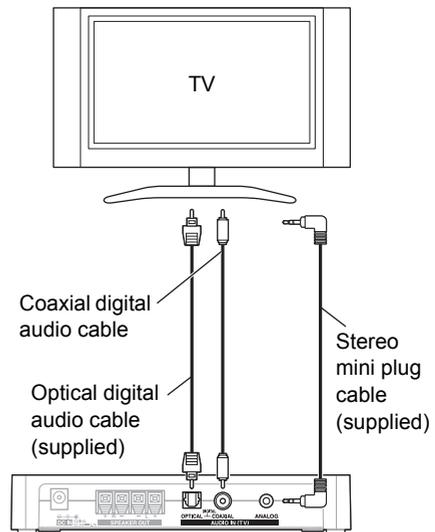

Connect the TV to either of the jacks of the controller.

#### Tip

- If the Dolby Digital signal is input, the **ON/STANDBY** LED flashes white and amber alternately three times.


#### Note

- Don't connect the different types of jacks together.
- When you find the both audio output from your TV and LS3200, turn the audio output from your TV speaker off by setting on the TV.

## Connecting the Power cord

(LAP-302)

- 1 Connect the supplied AC adapter and the power cord.

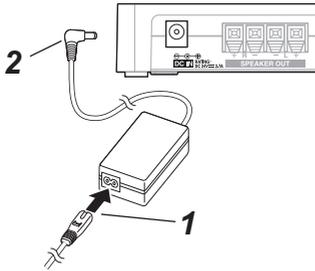


3 To AC wall outlet

- 2 Insert the plug of the AC adapter into DC IN.
- 3 Plug the AC adapter into an AC wall outlet.

(SKW-B50)

- 1 Connect the supplied power cord for subwoofer to AC INLET.

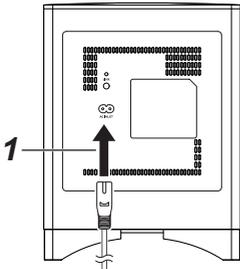

2 To AC wall outlet

### Note



- The shape of the **AC INLET** differs depending on the country.

- 2 Plug the power cord into an AC wall outlet.

### Note

- **Before connecting the power cord, connect all of your speakers and TV.**
- Turning on the unit may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the unit into a different branch circuit.
- Do not use the power cord other than the one supplied with the unit. The supplied power cord is designed exclusively for use with the unit and should not be used with any other equipment.
- Never disconnect the power cord from the unit while the other end is still plugged into a wall outlet. Doing so may cause an electric shock. Always disconnect the power cord from the wall outlet first, and then the unit.

# Operations

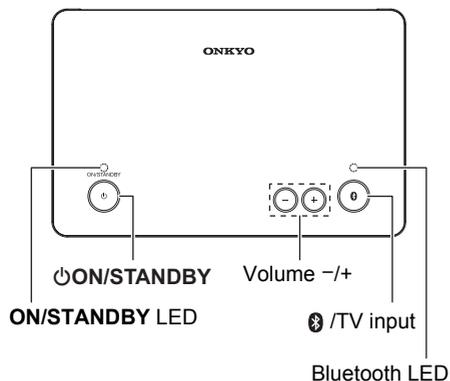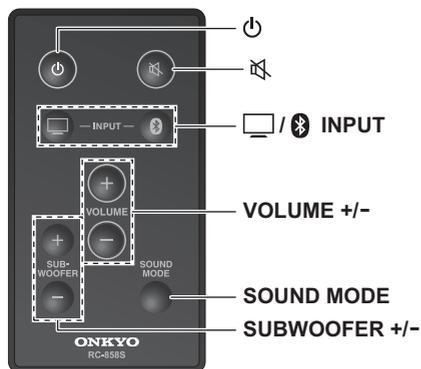

## Turning On the controller

- 1 Press **ON/STANDBY** on the top panel.

or

Press **ON** on the remote controller.

The controller comes on, and the **ON/STANDBY** LED lights white.

Press **ON/STANDBY** or **ON** again to set the controller to standby mode.

### Tip

- For details on power management settings, see “Setting the Auto Power On” (→page 18).

### Note

- To prevent any loud surprises when you turn on the controller, always turn down the volume before you turn it off.

## Enjoying the sound

### ■ Operating with the remote controller

- 1 Turn on the connected TV.
- 2 Press **TV INPUT** to select the TV selector.
  - “Listening to an audio from Bluetooth device” (→page 20)
- 3 To adjust the volume, use **VOLUME +/-**.
- 4 Select a sound mode and enjoy!
  - “Using the Sound Modes” (→page 19)

### ■ Operating on the controller

- 1 Turn on the connected TV.
- 2 Press the **TV/Bluetooth** input button repeatedly until the **Bluetooth LED** goes off to select the TV selector.
- 3 To adjust the volume, use the **Volume +/-** buttons.

### Tip

- Adjust the volume by 1 step in the 0 to 35 range.
- The **ON/STANDBY** LED flashes by receiving the signal from the remote controller.
- When the Auto Power On function is set to on, the controller is automatically turned on by receiving the audio input from the TV and the TV selector is selected.

## Adjusting the Subwoofer Level

- 1 Press **SUBWOOFER +/-** on the remote controller.

You can adjust the volume of subwoofer while listening to an input source. Adjust the volume by 1 step in the -10 to 10 range. The default is 0.

## Muting the controller

You can temporarily mute the output of the controller.

### ■ Operating with the remote controller

- 1 Press **M**.  
The output is muted and **ON/STANDBY** LED flashes white.

### ■ Operating on the controller

- 1 Simultaneously press and hold the **Volume +/-** buttons on the top panel.

Pressing Muting button on your TV remote controller sets both the controller and the TV to muting mode. If you press and hold the Muting button on your TV remote controller for three seconds again, the controller changes the setting. This is the function that adjusts the controller's setting to the TV's setting by switching the controller's setting when the controller's setting and TV's setting of on/off are different.

### Tip

- To cancel the muting, press **M** on the remote controller again or simultaneously press the **Volume +/-** buttons on the top panel or change the volume level.
- Muting is automatically cancelled when the controller is set to standby mode.

## Setting the Auto Power On

Since the Auto Power On function is set to on by default, the controller will automatically turn on and the TV selector is selected when the controller receives the audio input from the TV.

- 1 Turn off the controller.
- 2 Press and hold **ON/STANDBY** on the top panel for three seconds.

The function is switched on/off and the **ON/STANDBY** LED flashes amber.

When on: Twice

When off: Once

If you operate the controller with your TV remote controller, set the Auto Power On function to on. The controller cannot be turned on by using Power On button on your TV remote controller.

### Note

- If you don't want the controller to be turned on automatically when the TV is on, set the Auto Power On function to off.

## About the Auto Standby function

Since the Auto Standby function is set to on by default, the controller will automatically enter standby mode if there is no audio input or operation performed for a specified length of time. The length of time until the controller enters standby mode differs depending on the cables that are connected and the input source.

- Optical digital audio cable or coaxial cable connections: 2 hours (5 minutes if the TV is turned off)
- Stereo mini plug cable connections: 5 minutes
- Bluetooth: 5 minutes

To disable this function, turn on the controller, and then simultaneously press and hold

**ON/STANDBY** and the **TV** input buttons for three seconds. When the function is set to off, the **ON/STANDBY** LED flashes white once.

- Each time the procedure is repeated, the function switches between on and off. When the function is set to on, the LED flashes twice.

## Using the Sound Modes

### Selecting Sound Modes

You can switch the sound mode only with the remote controller.

#### SOUND MODE button

This button switches between the Normal Mode and Voice Mode. The **ON/STANDBY** LED flashes white once by selecting the Normal Mode. When the mode is switched to the Voice Mode, the **ON/STANDBY** LED flashes white twice.

Sound Mode	Description
Normal Mode	With this mode, a dynamic 3D sound is delivered with a deep, rich bass and high-frequency clarity for crisp detail.
Voice Mode	With this mode, human voices are clearly produced. This mode is optimum when listening to the news or documentary programs.

#### Tip

- The Sound Mode can be set by each of TV selector and Bluetooth selector separately.

## Switching the audio of sound multiplex programs

You can switch the audio only with Dolby Digital audio signals. Press and hold the **SOUND MODE** button on the remote controller for three seconds. Each time you press and hold the button, the setting switches in the following order.

**Primary audio:** The **ON/STANDBY** LED flashes white once.

**Secondary audio:** The **ON/STANDBY** LED flashes white twice.

**Primary audio + secondary audio:** The **ON/STANDBY** LED flashes white three times.

## Listening to an audio from Bluetooth device

### Note

- If your mobile phone supports A2DP protocol, its music will play through the controller.

### 1 Press the **⏻/TV** input button on the top panel repeatedly or **⏻ INPUT** on the remote controller until the Bluetooth LED lights to select the Bluetooth selector.

The controller searches the component connected previous time and starts the pairing in five seconds when the corresponding item is not found.

### Note

- If you press the **⏻/TV** input button on the top panel or **⏻ INPUT** on the remote controller again during pairing and switch the selector to TV, the operation will be cancelled.

### 2 While the Bluetooth LED is flashing quickly, you can operate the Bluetooth-enabled device to pair with the controller within a 32 ft. (10 m) range.

The pairing mode will be disabled in 25 seconds. When the mode is disabled, the LED will flash slowly.

For details on the Bluetooth connection, refer to the user manual of the Bluetooth-enabled device.

The controller may not work as normal depending on the circumstance even though the controller is placed within the 32 ft. (10 m) range. In such cases, get the Bluetooth-enabled device closer to the controller and retry the operation.

### 3 Once the controller is detected and its name “Onkyo LS3200” appears on the display of your Bluetooth-enabled device, select the “Onkyo LS3200”. If a prompt requests a password (PIN code), key in the “0000”.

When a Bluetooth connection is established successfully, the Bluetooth LED flashes twice, then lights.

### 4 Start playback on your device.

The controller automatically starts playing the audio.

### Tip

- If you press and hold the **⏻/TV** input button on the top panel or **⏻ INPUT** on the remote controller for three seconds with Bluetooth selector selected, the Bluetooth connection to the Bluetooth-enabled device is interrupted and start the pairing.

### Note

- If there is no sound output even after the pairing is done successfully, consult the user manual of the Bluetooth-enabled device, and then select the “Onkyo LS3200” as the audio output device.
- The controller can store the pairing information of up to 16 Bluetooth devices. If the pairing is done for the 17th Bluetooth device, the pairing information of device connected via Bluetooth in the most past times is erased.
- For some Bluetooth-enabled devices, a pairing is necessary for every reconnection.
- The multiple Bluetooth devices cannot be connected at the same time.

# Using a TV Remote Controller

## Preprogrammed feature

The unit has been preprogrammed so that the unit can be operated using your TV remote controller. Volume control and muting(\*) operations can be performed with this feature. If you want to use other functions or cannot operate the unit with your TV remote controller, you can use the learning function (described below) to enable these features.

To cancel this feature, press and hold ⊖ for approximately 3 seconds while continuing to press and hold **ON/STANDBY** on this unit. When this feature is enabled, the **ON/STANDBY** LED flashes white once. When it is disabled, the LED flashes twice. Perform the same procedures to use the TV remote controller again.

\* The mute state can be turned over each time you press the Mute button on your TV remote controller. In such case, you can synchronize the mute status of the unit and the TV by pressing and holding the Mute button on your TV remote controller.

## Learning function

The unit is set so that signals emitted from each button on your TV remote controller control specific operations.

\* It is recommended to select buttons that do not prevent TV operation when assigning the functions to your remote controller. Signal of some types of remote controller may not be received by the unit.

**E.g.) To assign the unit's ON/STANDBY function to the TV remote controller:**

**1** While continuing to press and hold the **TV input button on this unit, press and hold ON/STANDBY for approximately three seconds. The ON/STANDBY LED flashes amber for 10 seconds.**

**2** While the **ON/STANDBY LED is flashing amber, press any button on the TV remote controller three times while aiming it at the remote control sensor of the unit.**

The **ON/STANDBY** LED flashes amber twice to indicate that this was successfully configured. After being configured, pressing the button on the TV remote controller will operate the **ON/STANDBY** function on the controller.

The learning function enables the following unit functions to be operated with your TV remote controller.

Press and hold the following buttons instead of **ON/STANDBY** in step 1.

- VOLUME +: ⊕
- VOLUME -: ⊖
- MUTING: ⊕ and ⊖
- INPUT: **ON/STANDBY** and ⊕
- SOUND MODE: **ON/STANDBY** and ⊖

### To prevent incorrect operation:

The unit is preprogrammed to support a large number of TV remote controllers. For this reason, using remote controllers other than that supplied with the unit and TV remote controllers may result in unexpected operation.

In order to prevent incorrect operation, disable TV remote controller operation.

### Note


- If you assign volume control and muting operations with the learning function, the preprogrammed TV remote controller feature (volume control and muting) will be disabled. In addition, to cancel operations assigned with the learning function, reset the controller. (→page 22)

# Troubleshooting

If you have any trouble using the controller, look for a solution in this section. If you can't resolve the issue yourself, contact your Onkyo dealer.

If you can't resolve the issue yourself, try resetting the controller before contacting your Onkyo dealer.

**To reset the controller to its factory defaults, simultaneously press and hold **ON/STANDBY** and Volume **-/+** buttons on the top panel for 10 seconds. The controller will enter the standby mode after completing the initialization.**

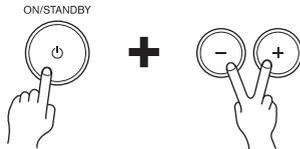

Note that resetting the controller will delete your custom settings.

## Power

### ■ Can't turn on the controller

Make sure that the power cord is properly plugged into the wall outlet. —

Unplug the power cord from the wall outlet, wait 10 seconds or more, then plug it in again. —

### ■ The controller turns off unexpectedly

In the case of an analog connection continuously feeding a weak input signal, the Auto Standby function may be activated. **19**

The controller will automatically enter standby mode when the Auto Standby function launches.

### ■ The controller turns off and after restoring the power, it turns off again

The protection circuit may have been activated. Remove the power cord from the wall outlet immediately. Make sure that all speaker cables and input sources are properly connected, and leave the controller with its power cord disconnected for 1 hour. After that, reconnect the power cord and turn the power on. If the controller turns off again, unplug the power cord and contact your Onkyo dealer. **14**

#### **WARNING**

If smoke, smell or abnormal noise is produced by the controller, unplug the power cord from the wall outlet immediately and contact your Onkyo dealer.

## Audio

### There's no sound, or it's very quiet

Make sure that all audio connecting plugs are pushed in all the way. **15**

Make sure that the input of TV is connected properly. **15**

Make sure that the polarity of the speaker cables is correct, and that the bare wires are in contact with the metal part of each speaker terminal. **14**

Make sure that the speaker cables are not shorting. **14**

When the **ON/STANDBY** LED flashes white, the muting is enabled. Press  on the remote controller or the Volume +/- buttons simultaneously on the controller to disable the muting. **18**

Make sure that none of the connecting cables are bent, twisted, or damaged. **—**

### The subwoofer produces no sound

Make sure that there is no obstacle or reflection between the controller and the subwoofer. **—**

Check that the **LINK** LED on the subwoofer is lit. If the LED is flashing, pair the controller and subwoofer. **24**

### Noise can be heard

Using cable ties to bundle audio cables with power cords, speaker cables, and the like may degrade the audio performance, so refrain from doing it. **—**

An audio cable may be picking up interference. Try repositioning your cables. **—**

## Remote Controller

### The remote controller doesn't work

Make sure that the battery is correctly installed with its polarity (+/-) as indicated. **8**

Make sure that the remote controller is not too far away from the controller, and that there's no obstruction between the remote controller and the remote control sensor of the controller. **8**

Make sure that the remote control sensor of the controller is not being subjected to bright light (direct sunlight or inverter-type fluorescent lights). **—**

If the remote controller doesn't work the first time it is used after the unit is purchased or if it is not used for a long period of time, the battery may have become depleted. **—**

Try the following operations.

- Press and hold the **VOLUME -** button on the remote controller for a while (at least 10 seconds). (Try repeating this multiple times.)
- Remove the button battery, wipe it with a dry cloth, and then insert it again.

### The controller and the TV operated by your TV remote controller doesn't work

Make sure that the controller mounted to the wall and the TV set are not placed too far. **11**

Your TV remote controller might not be compatible with TV remote controller preprogrammed codes function. If the **ON/STANDBY** LED (white) does not flash by pressing the buttons on your TV remote controller, use the supplied remote controller or program the controller. If the controller cannot be operated with your remote controller even if the programming has been performed, the controller might not recognize your remote controller. In this case, use the supplied remote controller. **—**

## ■ Volume +/- or Muting function works by also pressing other buttons when operating controller with your TV remote controller

For some TV remote controller, **21**  
Volume +/- or Muting function might work by also pressing other buttons. (Volume is increased by pressing 0 (number button), etc.) In order to prevent incorrect operation, use the controller to configure volume control and muting buttons on the TV remote controller. In addition, disable TV remote controller operation.

### Others

## ■ Pairing the controller and the subwoofer

### Turn on the controller before performing a pairing.

### 1 Press and hold **LINK** on the rear panel of the subwoofer for five seconds.

Flashing speed of the **LINK** LED is changed.

### 2 Press and hold **ON/STANDBY** on the controller for three seconds until the **ON/STANDBY LED** flashes white.

The controller and the subwoofer starts pairing. The **ON/STANDBY** LED flashes white twice indicating that the pairing is completed.

#### Tip

- If the controller is turned off or enters the standby mode, also the subwoofer enters the standby mode in 30 seconds. In this mode, the controller automatically detects a pairing point and reconnects. The subwoofer is automatically turned on when the link is recovered.

#### Note

- Depending on the reception condition, the sound might be stopped or interrupted while using. This is not a malfunction. In this case, change the place or direction of the controller or the subwoofer.
- If the controller and the subwoofer are too far, the reception might be unstable. They should be placed within 32 ft. (10 m).

- If there is an obstacle (metal door, concrete wall and insulation contained aluminum foil, etc.) between the controller and the subwoofer, it might block the reception and stop the sound. Place the controller and the subwoofer in good visibility with each other.
- Use the controller and subwoofer included together in the package. No other devices can be combined.

The controller contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this happens, unplug the power cord from the wall outlet, wait at least five seconds, and then plug it back in.

Before disconnecting the power cord from the wall outlet, set the controller to standby.

# Specifications

## Controller (LAP-302)

### Rated Output Power

**All channels:** (North American)  
20 watts minimum continuous power per channel, 4 ohm loads, 2 channels driven at 1 kHz, with a maximum total harmonic distortion of 0.8% (FTC)  
(Others)  
2 ch × 20 W at 4 ohms, 1 kHz,  
2 ch driven of 0.8% (IEC)

### Maximum Effective Output Power

(Australian)  
2 ch × 22 W at 4 ohms, 1 kHz,  
2 ch driven (JEITA)

### THD+N (Total Harmonic Distortion+Noise)

0.8% (Power Rated)  
0.2% (1 kHz, 1 W)

**Damping Factor** 29 (1 kHz, 8 Ω)

### Frequency Response

50 Hz - 20 kHz/+3 dB, -3 dB  
(DIGITAL)

### Speaker Impedance

4 Ω - 8 Ω

**Power Supply** AC 100 - 240 V, 50/60 Hz

### Power Consumption

17 W

### Stand-by Power Consumption

0.5 W

### Dimensions (W × H × D)

187 mm × 32 mm × 120 mm  
7-3/8" × 1-1/4" × 4-3/4"

**Weight** 0.3 kg (0.7 lbs.)

## ■ Audio Inputs

**Digital** Optical: 1 Coaxial: 1

### Analog Stereo Input

ø 3.5 mm mini

**Bluetooth** Version: 2.1+EDR  
Profile: A2DP GAVDP

## ■ Audio Output

**Speaker Output** SPEAKER OUT

## Front Speaker (SLM-302)

**Type** Full Range Closed Box

**Impedance** 4 Ω

### Maximum input power

20 W

### Output sound pressure level

86 dB/W/m

### Frequency Response

200 Hz - 20 kHz

**Cabinet capacity** 0.6 L (0.021 cubic feet)

### Dimensions (W × H × D)

169 mm × 78 mm × 108 mm  
6-5/8" × 4-3/8" × 5-1/4"  
(incl. grille and projection)

**Weight** 0.7 kg (1.5 lbs.)

**Drivers unit** 6.5 cm (2-1/2") cone × 2

**Terminal** Spring type

**Other** Non magnetic shielding

## Subwoofer (SKW-B50)

### Rated Output Power (FTC)

(North American)  
50 watts minimum continuous power, 4 ohms, driven at 100 Hz with a maximum total harmonic distortion of 1%

### Rated Output Power (IEC)

(Others)  
50 watts minimum continuous power, 4 ohms, driven at 100 Hz with a maximum total harmonic distortion of 1%

### Play Frequency Band

40 Hz - 200 Hz

**Cabinet capacity** 11.5 L (0.41 cubic feet)

### Dimensions (W × H × D)

261 mm × 337 mm × 269 mm  
10-1/4" × 13-1/4" × 10-9/16"

**Weight** 5.8 kg (12.8 lbs.)

**Drivers unit** 16 cm (6-1/2") cone

**Power Supply** (North American) AC 120 V, 60 Hz  
(Others) AC 220 - 240 V, 50/60 Hz

### Power Consumption

15 W


**Other** Non magnetic shielding  
Auto standby

Specifications and features are subject to change without notice.

# Memo



Use this template to mount the LAP-302 to the wall (→page 11).

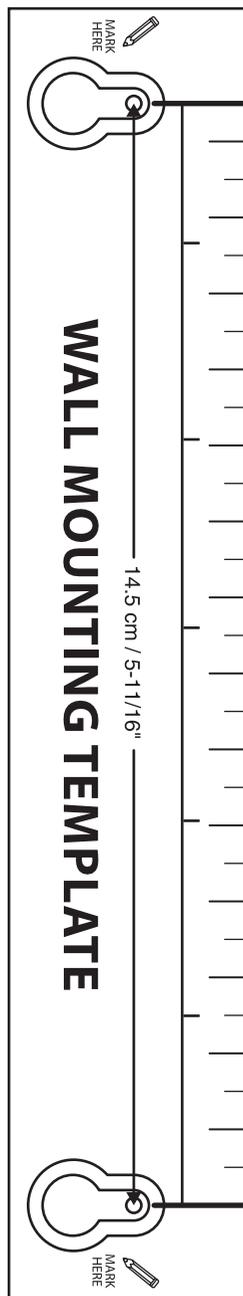

# ONKYO

## Onkyo Corporation

Kitahama Chuo Bldg, 2-2-22 Kitahama, Chuo-ku, OSAKA 541-0041, JAPAN  
<http://www.onkyo.com/>

## The Americas

### Onkyo U.S.A. Corporation

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
For Dealer, Service, Order and all other Business Inquiries:  
Tel: 201-785-2600 Fax: 201-785-2650  
<http://www.us.onkyo.com/>

For Product Support Team Only:  
1-800-229-1687  
<http://www.us.onkyo.com/>

## Europe

### Onkyo Europe Electronics GmbH

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY  
Tel: +49-8142-4401-0 Fax: +49-8142-4208-213  
<http://www.eu.onkyo.com/>

### Onkyo Europe Electronics GmbH (UK Branch)

Meridien House, Ground floor, 69 - 71 Clarendon Road, Watford, Hertfordshire, WD17 1DS,  
United Kingdom  
Tel: +44 (0)8712-00-19-96 Fax: +44 (0)8712-00-19-95

## China

### Onkyo China Limited (Hong Kong)

Unit 1033, 10/F, Star House, No 3, Salisbury Road, Tsim Sha Tsui Kowloon, Hong Kong.  
Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.hk.onkyo.com/>

### Onkyo China PRC (Mainland)

302, Building 1, 20 North Chaling Rd., Xuhui District, Shanghai, China 200032,  
Tel: 86-21-52131366 Fax: 86-21-52130396  
<http://www.cn.onkyo.com/>

## Asia, Oceania, Middle East, Africa

Please contact an Onkyo distributor referring to Onkyo SUPPORT site.  
<http://www.intl.onkyo.com/support/>

The above-mentioned information is subject to change without prior notice.  
Visit the Onkyo web site for the latest update.

F1505-0

SN 29402092

(C) Copyright 2015 Onkyo Corporation Japan. All rights reserved.



\* 2 9 4 0 2 0 9 2 \*