

How to Set Up Your WiiM Voice Remote 2

How to Set Up Your WiiM Voice Remote 2

Modified on: Sun, Aug 10, 2025 at 8:21 PM

TABLE OF CONTENTS

- [Compatible WiiM Devices](#)
- [WiiM Voice Remote 2 Controls and Lights](#)
- [Set Up the WiiM Voice Remote 2](#)
- [LED Indicator Status](#)
- [Use the WiiM Voice Remote 2 for Alexa Voice Control](#)
- [Additional Information](#)


The WiiM Voice Remote 2 is a premium Bluetooth remote with USB-C charging, designed for WiiM streamers and amplifiers. It offers 360° wireless control from anywhere in the room, with Alexa voice commands and intuitive playback buttons. This tutorial will show you how to use it with your WiiM devices.

Compatible WiiM Devices

The WiiM Voice Remote 2 is compatible with all WiiM streamers and WiiM streaming amplifiers, including:

- WiiM Mini
- WiiM Pro
- WiiM Pro Plus
- WiiM Amp
- WiiM Amp Pro
- WiiM Amp Ultra
- WiiM Ultra

WiiM Voice Remote 2 Controls and Lights

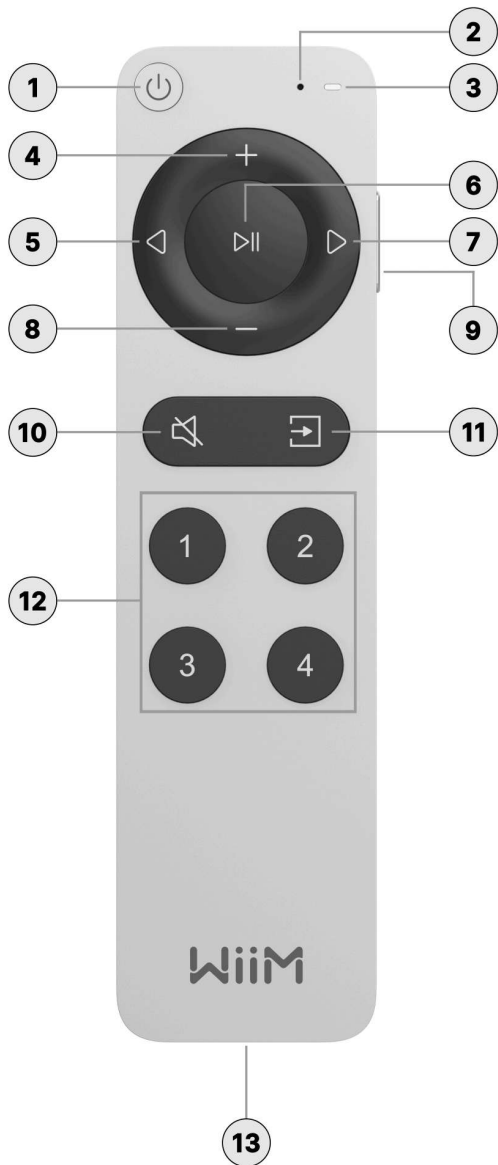

Each numbered control on the WiiM Voice Remote 2 is explained below:

1	Standby	Press to put the WiiM device into standby mode.
2	Microphone	Capture voice commands.
3	LED Indicator	Indicate the operational status of the WiiM Voice Remote 2. For details, see <u>LED Indicator Status</u> .
4	Volume Up	Press to increase the speaker volume.
5	Previous	Press to return to the previous playback or restart the current playback.
6	Play/Pause	Press to start or pause the current playback.
7	Next	Press to skip to the next playback.
8	Volume Down	Press to decrease the speaker volume.

9	Voice Control	Located on the right-hand side of the remote; press and hold to give Alexa voice commands.
10	Mute/Unmute	Press to mute or unmute the speakers.
11	Source Switch	Press to change the input source.
12	Preset Shortcuts	Press buttons 1~4 to play presets.
		A single press plays presets 1~4. A quick double press plays presets 5~8 (e.g., a quick double press of button 1 plays preset 5, button 2 for preset 6, etc.).
13	USB-C Charging Port	Connect a USB-C cable to this port to charge the remote.

Set Up the WiiM Voice Remote 2

To use the WiiM Voice Remote 2 for controlling your WiiM device or issuing Alexa voice commands, you'll first need to pair it with your device by following these steps:


1. Put the remote into the pairing mode by pressing and holding the **Source Switch**




and **Mute/Unmute**




buttons for two or more seconds simultaneously.



2. When the LED indicator on the remote starts to flash white slowly, release the buttons.
3. Open the WiiM Home app on your smartphone or tablet.
4. Navigate to the **Devices** tab, tap the **Device Settings** icon  of your WiiM device.
5. Choose **Remote**.

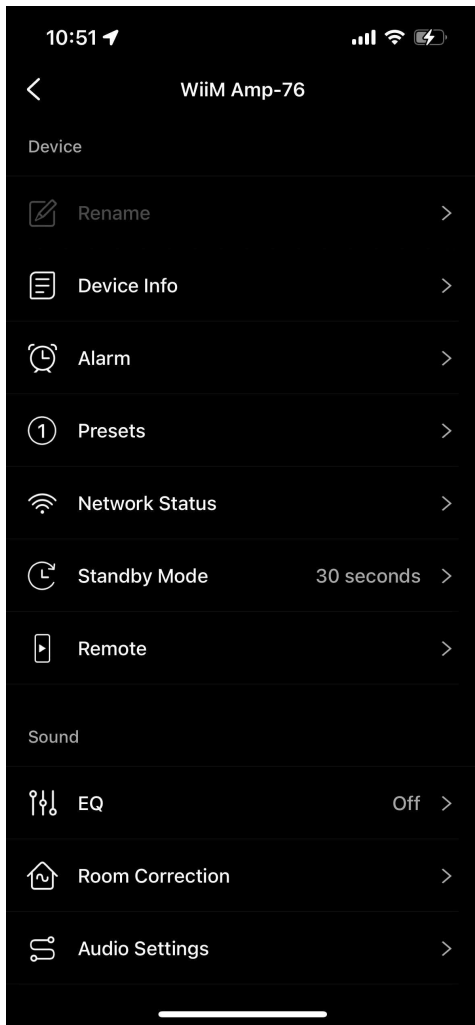

6. When the following pop-up appears, tap **Pair Your Remote** to start the pairing process.

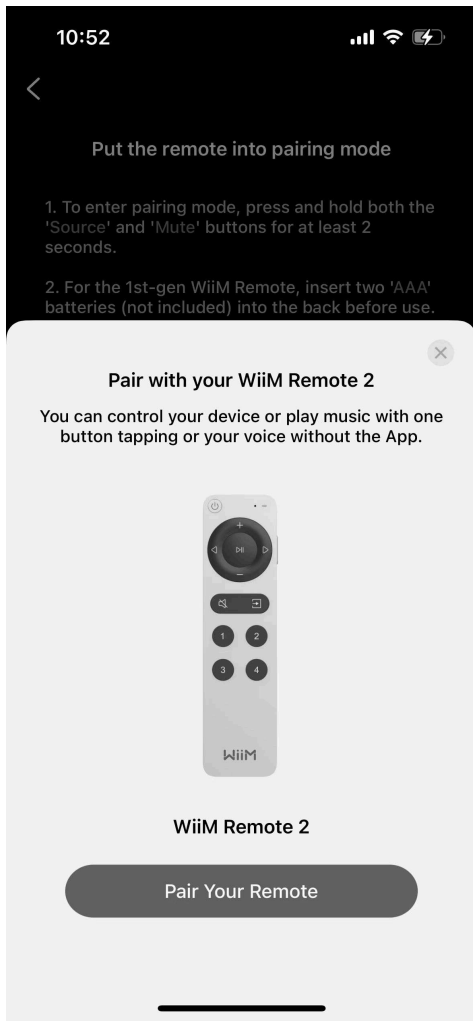

 7. Follow the on-screen instructions to finish the pairing process.

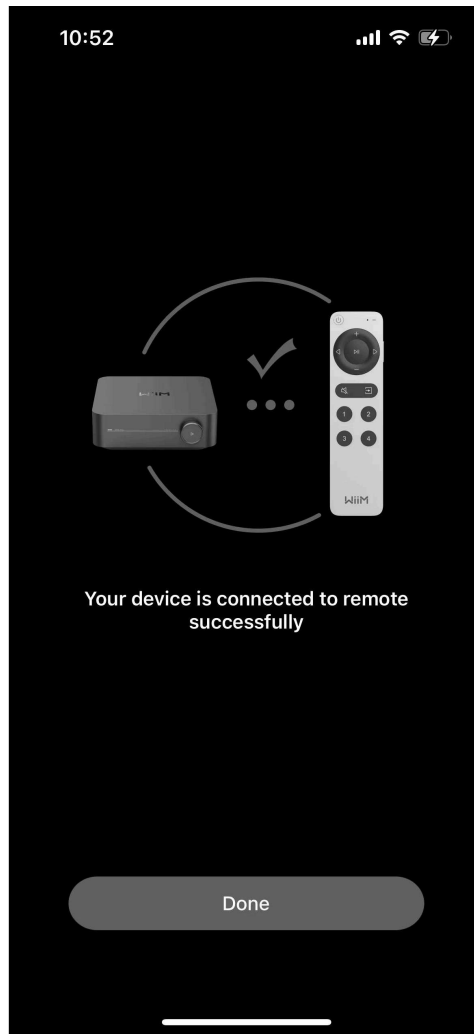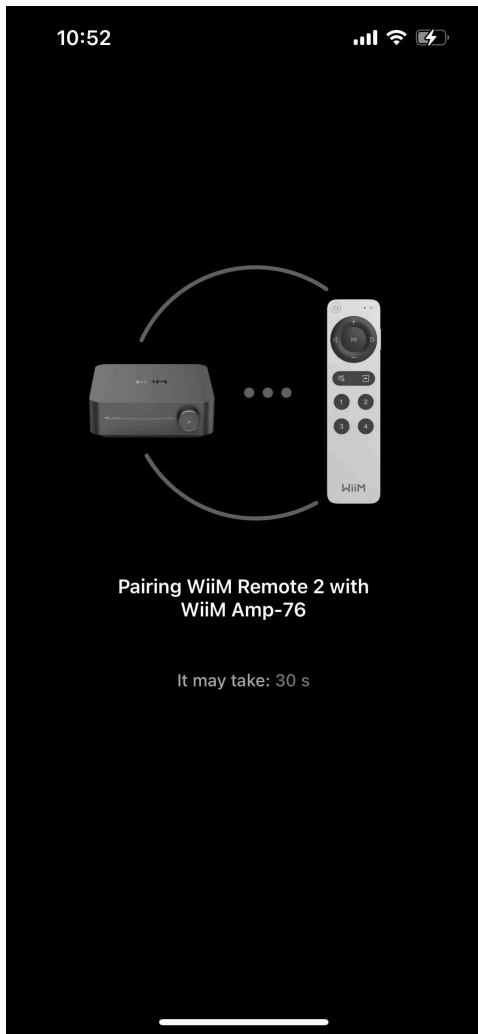

8. Once Bluetooth pairing is successful, the white LED will light up for 10 seconds and then turn off.


LED Indicator Status

Operation/State	LED Color/Pattern
Charging in progress	Slow flashing green
Charging completed	Solid green
Button press (when paired)	White LED lights up when pressed and turns off when released.
Button press (when not paired)	Orange LED lights up when pressed and turns off when released.
Ready for pairing	Slow flashing white
Pairing in progress	Fast flashing white
Pairing successful	White LED lights up for 10 seconds, then turns off.
Pairing failed	Red LED lights up for 10 seconds, then turns off.
Low battery (< 20%)	Slow flashing red 6 times after each operation

Use the WiiM Voice Remote 2 for Alexa Voice Control

Follow these steps to use Alexa voice commands with the WiiM Voice Remote 2 for hands-free music playback control:

1. Sign in to **Amazon Alexa** from the WiiM Home app. For details, see **[How to Use Alexa with Your WiiM Device](https://faq.wiimhome.com/en/support/solutions/articles/72000528773)** (<https://faq.wiimhome.com/en/support/solutions/articles/72000528773>).

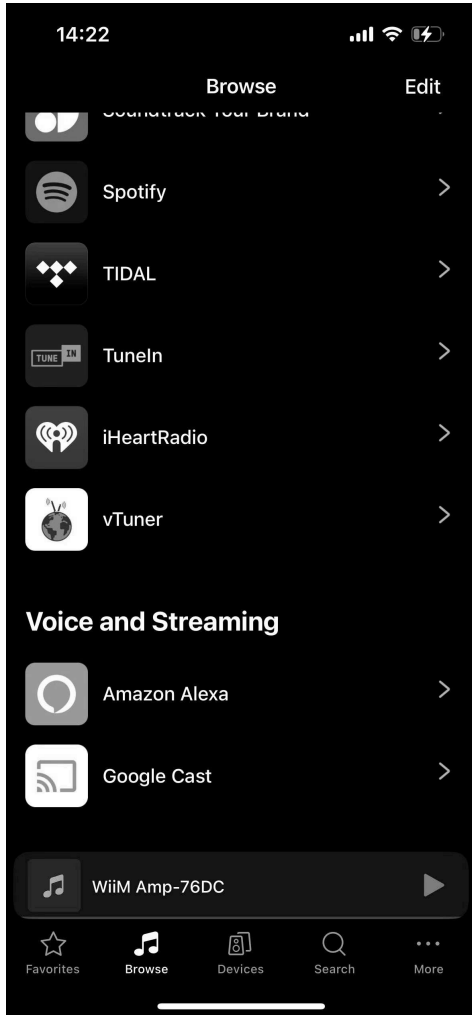

2. Press and hold the **Voice Control** button



on the right-hand side of the remote to give Alexa voice commands.

For example, you can try any of the following Alexa commands:

- "Play daily lift from Spotify"
- "Play my soundtrack from Amazon Music"
- "Volume 5"
- "My daily brief"
- "Play ESPN radio"
- "Play Pandora"

For more details, please check the tutorial [here](#)

(<https://faq.wiimhome.com/en/support/solutions/articles/72000597134-what-voice-commands-can-i-use-with-my-wiim-remote->).

3. Once you've finished giving your command, release the **Voice Control** button



, and Alexa will process your command.

Additional Information

- Each time you press a button on the WiiM Voice Remote 2, the LED will flash once to indicate it is functioning. This also allows you to quickly check if the remote has power and is working properly.
- If the LED starts flashing red slowly, it indicates the battery is low. Simply charge the remote using a Type-C cable.